



Manual Strainer Cleaning Procedures

Cleaning Procedures. When pressure drop across the strainer exceeds 4 psid, perform the following cleaning procedure.

- a. Open the overboard discharge valve.
- b. Rotate each hand wheel two (2) revolutions.
- c. Open flushing line cut-out valve(s) completely and watch the sight flow indicator.
- d. When sight flow indicator shows no entrained solids (i.e., a clear flow), close the flushing line cut-out valve. Flush strainer for approximately 1 minute to ensure all debris is flushed overboard.
- e. If pressure drop exceeds 2 psid, repeat steps 1 through 4.